

**NOTICE**

The front skewer contains a hidden security bolt. Remove it before installing/uninstalling the front wheel. Use a 2.5mm hex key to remove it.

Then use a 5mm hex key to tighten or loosen the front skewer when installing/uninstalling the front wheel.

Reinstall the security bolt once the front wheel is properly installed

